




1. Your booth is design to assemble from back to front. Start with the sides panels and attached to the back wall.
2. Once you have the three panels attached you can attach the door frame.
3. Line up the door frame, with the pre-set furniture set screws. They will attach to the other panel from the front and back in three points on each side.
4. Assure that the back panels and front panels line up evenly with the sides



5. For future the window panel can be flipped around and used on either the left or the right side.
6. Set the roof on top of the joined panels. From the inside set the pre-drilled screws up into the roof. You might want to have a someone help hold the roof down while the screws are being set.
7. On the back wall the sides will be thicker and you can mount the desk and or shelf at the height you want. 30" is the standard height for a desk and the 44" is standard for a shelf. This is the perfect height to stand and record.
8. If you notice in the lower section there will be a access point, this is for feeding through any electrical and or audio or network cables you might need.


*** NOTE*** Your booth will be delivered on a double pallet and will weigh approx. 335 lb. Freight carriers will not place the pallets in the house or office building, you will need to have ample help to unpack and move the panels to wherever you are going to set the booth up.

10. Enjoy your VoiceSuite !!!

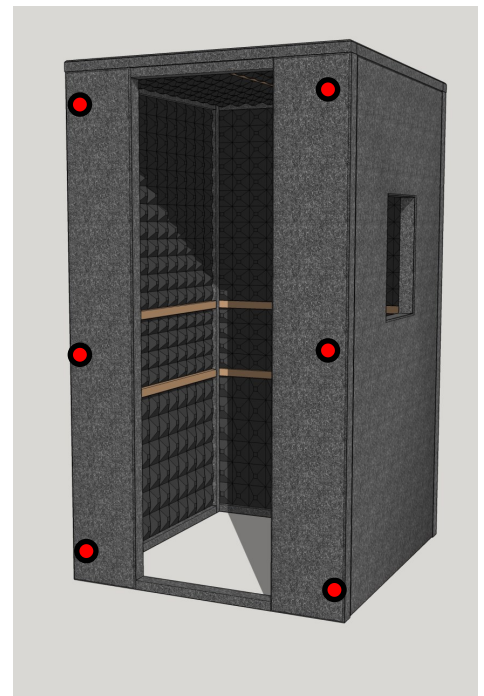


Please feel free to contact VoiceSuite if you have any questions about your assembly. We are happy to Zoom or Facetime with you to help through the process.

Panel with window can be used on left or right. NOTE: Side panels attach to the back and front panels, please make sure they don't attach on the outside of the back and front panels. Ceiling will be installed after the wall setup

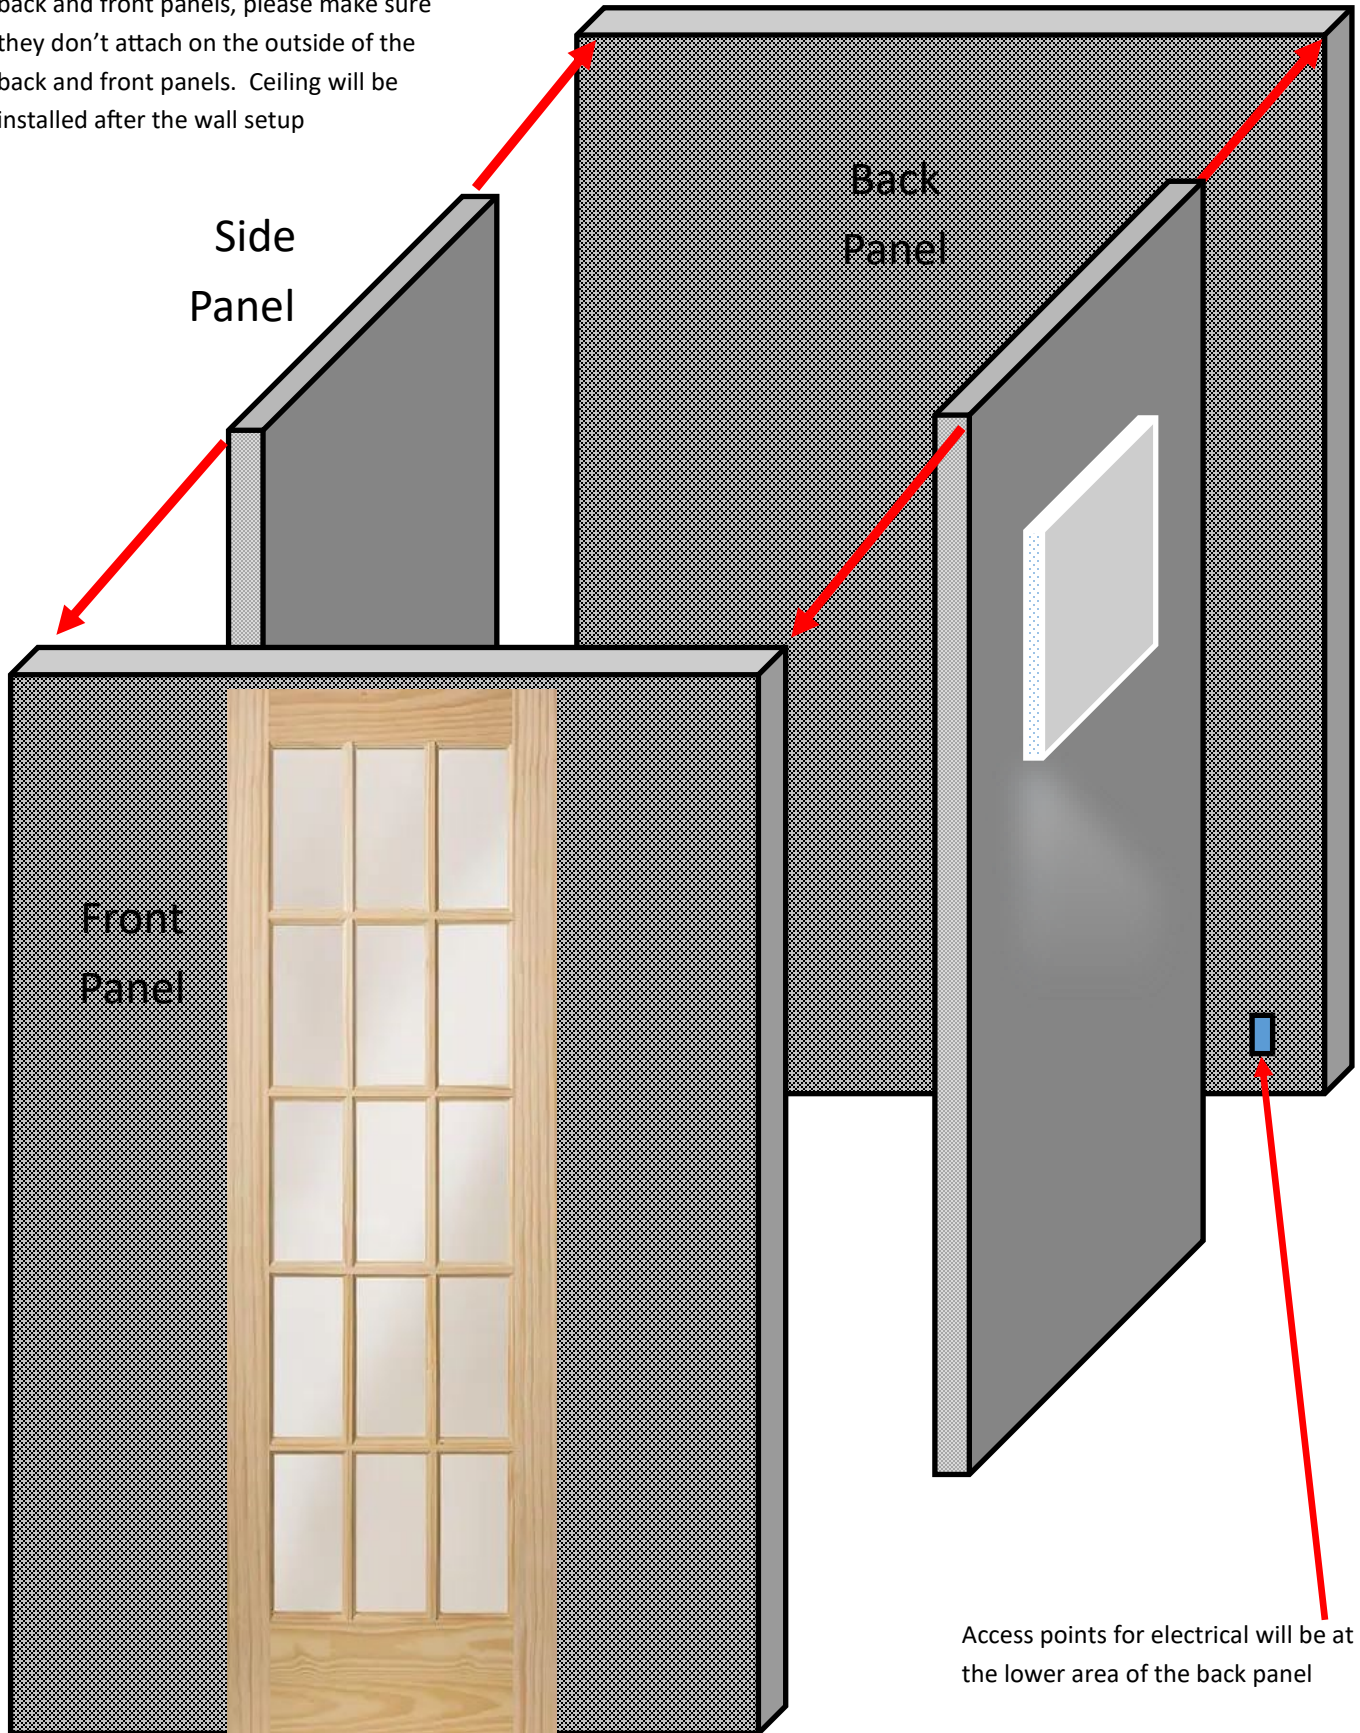

Panel with window can be used on left or right. NOTE: Side panels attach to the back and front panels, please make sure they don't attach on the outside of the back and front panels. Ceiling will be installed after the wall setup

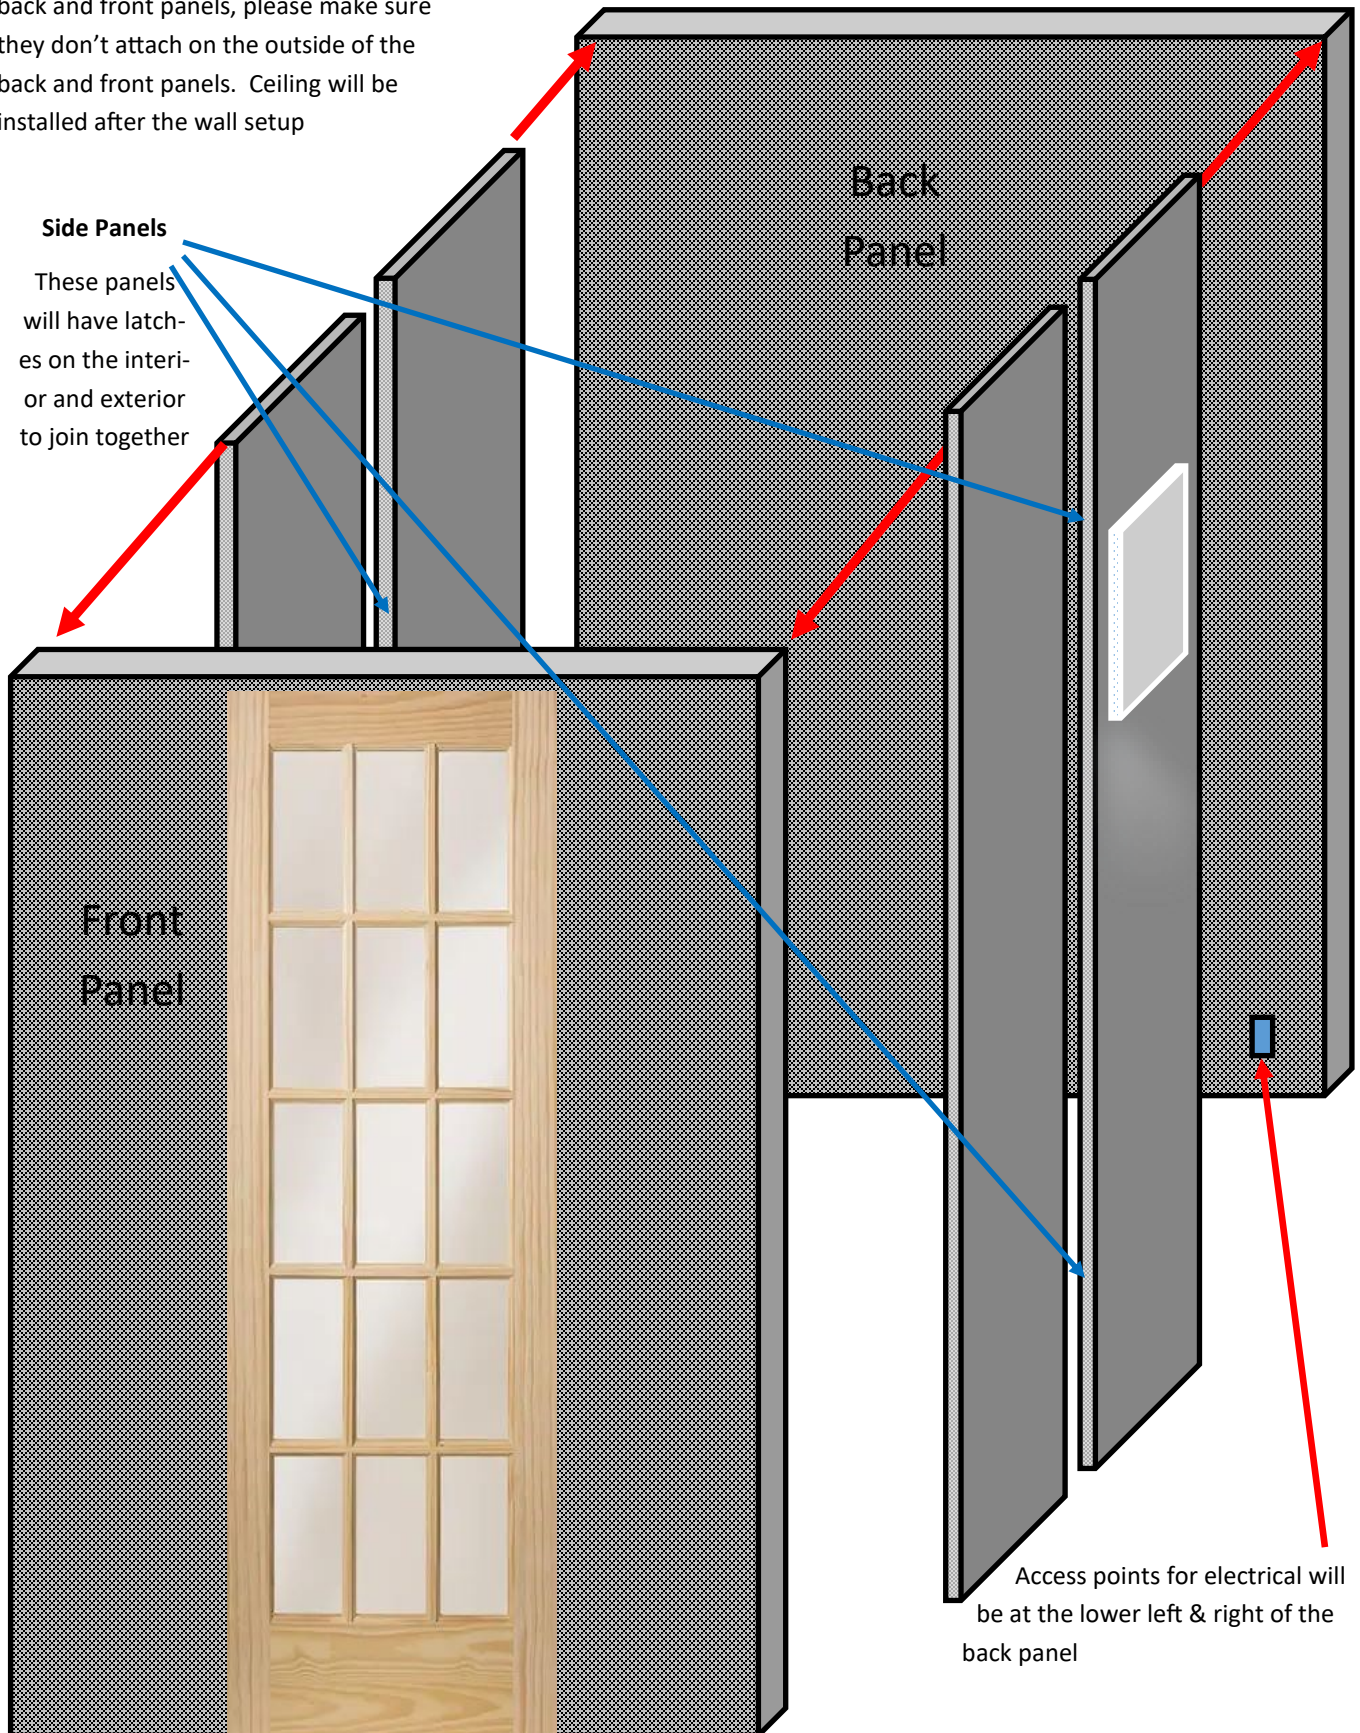



1. We recommend that you use a drill to set the furniture bolts. These will be a 4mm Allen wrench. These will be for attaching the sides and the roof. A 4mm Allen wrench is included in your bag.
2. 3. Line up the all the panels with the pre-set fasteners.
4. Assure that the back panels and front panels line up evenly with the sides
5. The roof will be attached with the same furniture screws

ALL PANELS WILL BE FITTED WITH THE ATTACHED FASTENERS. ONCE SET YOU CAN USE THE EXTRA

